




Point to point Resistance check

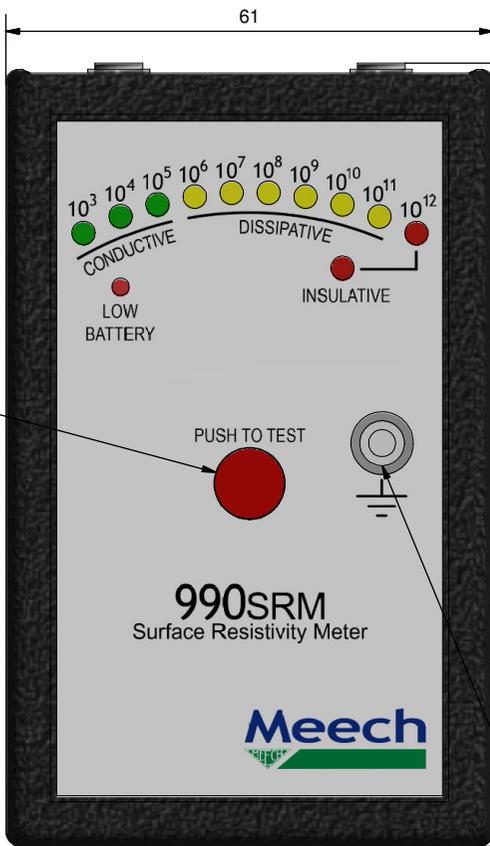


61



26

96

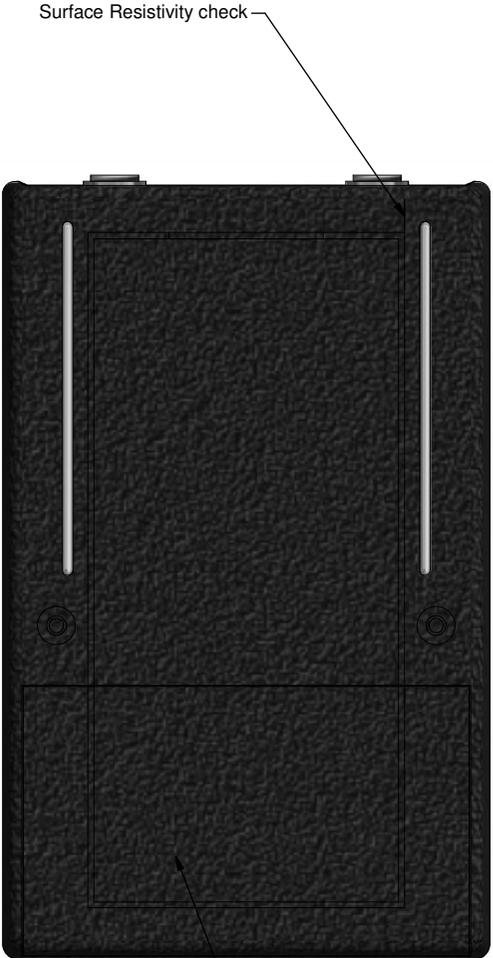

Surface Resistivity check

Surface to Ground Resistance check

9V Battery Compartment

Test Button

PUSH TO TEST

**990SRM**  
 Surface Resistivity Meter



D

C

B

A

D

C

B

A

6

5

4

3

2

1

6

5

4

3

2

1