

Operating Manual



HYPERION™
A Meech Innovation

Hyperion 924IPsv2
Short-Range DC Bar

Contents

1.0 Safety Instructions	4
2.0 Introduction	5
3.0 Package Contents	6
3.1 Optional Extras	6
4.0 Unpacking & Inspection	6
5.0 Overview of 924IPSV2 - Features and Benefits	7
6.0 Mechanical Installation	10
7.0 Electrical Installation	12
7.1 Dual Alarm Alert - Remote Monitoring	14
8.0 Operation	19
9.0 Technical and Construction Data	20
10.0 Maintenance	21
11.0 Fault Finding	22
12.0 LED Status	23
13.0 Troubleshooting	24
14.0 CE Approval	24
15.0 Health and Safety	25
16.0 Repairs and Warranty	25
17.0 Technical Drawing	26

Products shown in this document may be covered by one or more patents, patents applied for and/or registered designs and/or trade marks. For further information please refer to our Head Office or visit www.meech.com.

Document version: 2 Software Version: 3.04

Section 1.0: Safety Instructions

Before using equipment, read the following safety and operating instructions to ensure your own personal safety and help to protect your equipment. Failure to do so could result in injury. Connected equipment may require additional safety instructions. Observe all safety instructions for additional equipment connected before operating.

1.1 General Safety

Before setting up the equipment:

- Read the operating instructions carefully and ensure you understand how to correctly use the equipment.
- Installation and testing must only be completed by those suitably qualified.
- Inspect the working environment and ensure it is clean and clear of hazards before removing equipment from packaging and positioning the system.
- Visually check all equipment for damage. If damaged, contact your local Meech representative before continuing.
- Ensure a full understanding of the symbols attached to the equipment before operating.
- Keep all cables secured until ready for use.
- Keep a copy of the Operating Manual close to the system at all times.


1.2 Electrical Safety

Before installing, performing repairs or maintenance on equipment, ensure the system is electrically isolated. Failure of this could result in injury.

Before working on the equipment:

- Check the equipment is electrically isolated correctly.
- Check equipment and cables for damage. If damaged, contact your local Meech representative before continuing.
- Ensure all wiring is completed by competent persons.
- Check all connections in relation to the wiring diagram

Section 2.0: Introduction

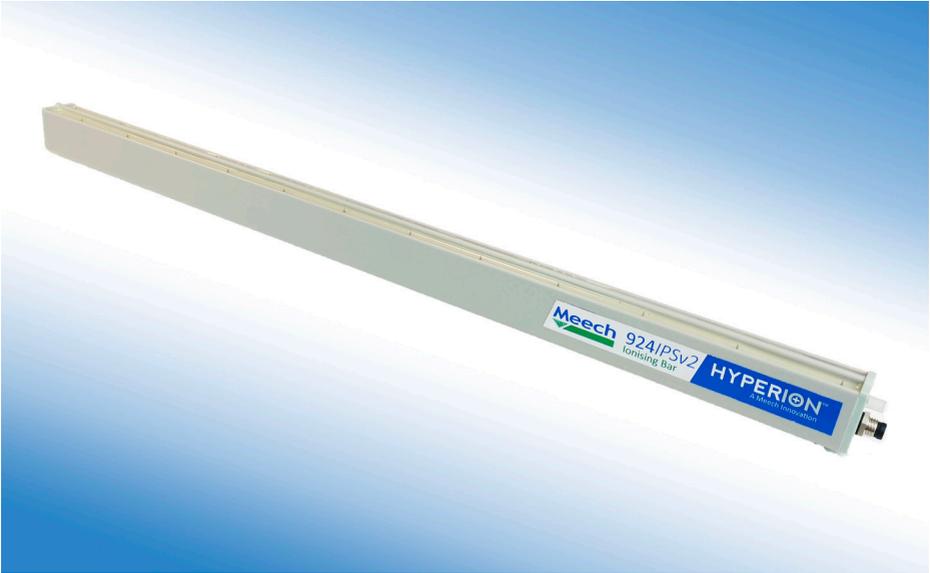

The Hyperion 924IPsv2 is a compact pulsed DC ionising bar. It is used to control static electric charges in short range applications (20-150mm). An integral 7.5kV pulsed DC power supply allows for easy installation on printing, converting and packaging machinery. Requiring only a 24V DC supply, the 924IPsv2 removes the need to route high-voltage cabling through the machine.

In most installations the default settings of the bar will provide exceptional static control. The local LED indicator shows the operational status of the bar and advises when the bar requires cleaning.

Demanding installations can take advantage of the adjustable output of the 924IPsv2. Using the optional Hyperion BarMaster remote programmer or SmartControl Touch, the frequency, balance and voltage output can be optimised to suit the application. Additionally, the Ion Current alarm setting can be changed to guarantee the required performance levels on critical processes. The 924IPsv2 also features dual alarm lines to enable remote monitoring for both ionising system maintenance and system faults.

The Hyperion BarMaster remote programmer and SmartControl Touch are available for purchase from the Meech network: Visit www.meech.com to find your nearest Meech office or distributor for further product information.

Section 3.0: Package Contents



924IPsv2 Bar



Mounting Kit

Section 3.1: Optional Extras



SmartControl Touch



Power Cable -
4 Pin M8
(straight or
90° elbow)
Available in 2,3,5
and 10M lengths.



24V DC Supply &
IEC cable



BarMaster remote
programmer.
Allows optimisation
of the output of the
924IPsv2

Section 4.0: Unpacking And Inspection

Your Hyperion 924IPsv2 bar was carefully packed at the factory in a container designed to protect it from accidental damage. Nevertheless, we recommend careful examination of the carton and contents for any damage.

If damage is evident, do not destroy the carton or packing material and immediately notify the carrier of a possible damage claim. Shipping claims must be made by the consignee to the delivering carrier.

Section 5.0: Overview of 924IPsv2 - Features and Benefits

5.1: Low voltage wiring and Integrated Power Supply



The 924IPsv2 is powered by 24V DC via a 4-pin M8 Connector.

5.2: Shockless Emitters

The Titanium emitter pins on the 924IPsv2 are resistively coupled to the high voltage supply. This avoids sparking and operator shocks.

5.3: Sealed Construction

IP66 construction allows the bar to be mounted in areas subject to occasional wash- down or spillage. If the bar does become wet it must be thoroughly dried before being powered-up.

5.4: Clean Pin Alert and Fault LED



The local LED illuminates constant green to indicate that the bar is on and working correctly. Red flashing LED shows that bar is dirty and needs cleaning. Solid red illumination indicates a fault with the high voltage output.

- Green constant – OK
- Green flashing – BarMaster remote programmer connected
- Red flashing – Cleaning required
- Red constant – Fault

5.5: Dual Alarm Lines - Clean Pin Alert and Fault Output

Dual alarm lines tell remote monitoring systems whether the ionising equipment needs routine maintenance or whether there is a more serious system failure. The flexible configuration of the alarm system, allows the alarm lines to be interfaced with PLC's, buzzers and remote lamps.

Dual output signals indicate when the bar needs cleaning and when a fault has been detected. The signal is 0V/24V output on pin 2 for Clean Pin Output and 0V/24V output on pin 4 for Fault Alert Output. The default for Bar OK = 24V and for Bar needs cleaning = 0V. For the Fault Alert Output the default is 0V. If required the signal can be inverted using a BarMaster Remote Programmer or SmartControl. For example Bar OK = 0V, Cleaning Required = 24V

5.6: Divider



The 924IPsv2 is designed to operate in dirty, factory environments. To maximise the interval between cleaning the bar features a divider to increase the surface tracking distance between the two rows of high voltage pins. It is important to clean this area during cleaning operations.

5.7: T-Slot



The bar is mounted using the T-Slot at the rear of the bar. M4 T-bolts supplied with the bar may be positioned to suit convenient mounting points.

Section 6.0: Mechanical Installation


6.1: Positioning

The 924IPsv2 is a short to mid-range bar. Dependent on the application, the bar will be mounted between 20mm and 150mm from the target surface.

The bar should be mounted securely, using all the M4 T-bolts provided with the bar.





Correct positioning of the bar is vital for effective static control. There must be no metallic objects or obstruction between the bar and the material. The diagram shows the area that should be kept clear.

For optimum ionisation performance and maximum emitter pin life the ionising bar should be mounted on insulating mountings 25mm from conductive materials.

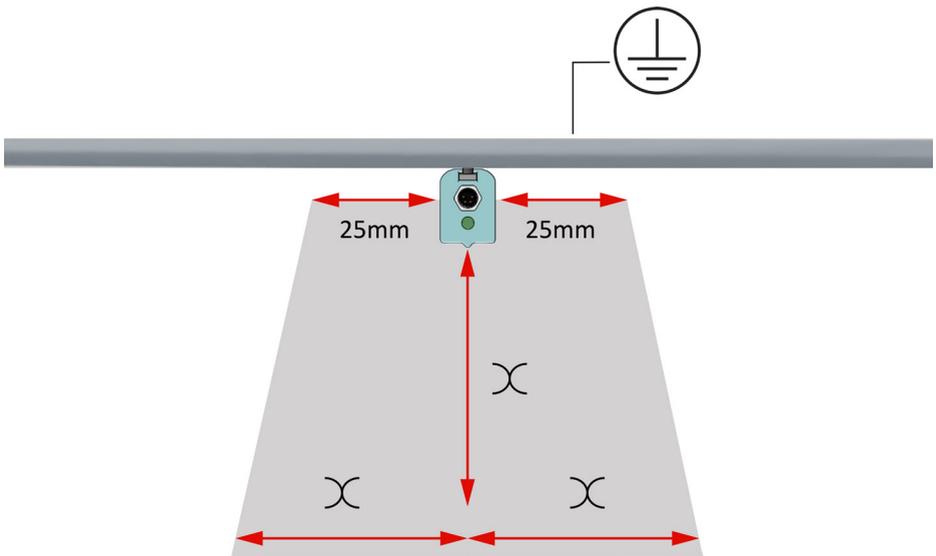

Where x lengths are equal.

When installed at short range over a web or sheet, the bars must be positioned away from surfaces and rollers, as shown in the following diagrams.

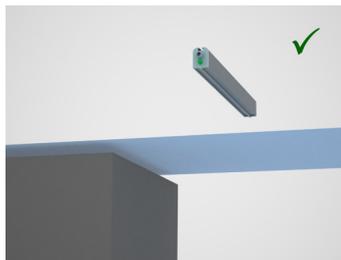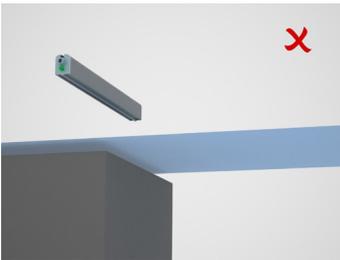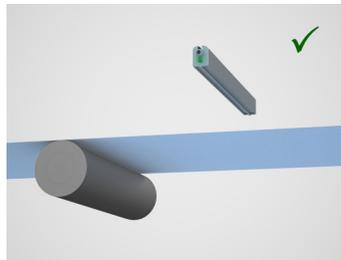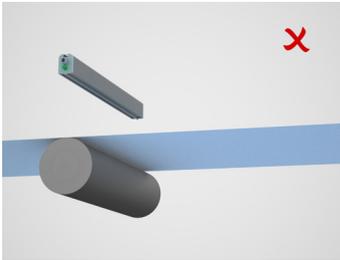

Your Meech distributor will be able to assist with questions regarding positioning of your equipment.


Section 7.0: Electrical Installation

WARNING

THE 924IPSV2 REQUIRES A GROUNDED 24V DC SUPPLY. THE 0V LINE MUST BE CONNECTED TO GROUND. FAILURE TO DO SO, WILL RESULT IN DAMAGE TO THE BAR OR THE 24V SUPPLY AND WILL VOID THE WARRANTY.


Connection using a grounded 24V DC power supply. E.g. Meech part number A900IPS-SM2MS.

- Meech 24V DC supplies are grounded internally. They are supplied with a three wire IEC C5 cable.
- The ground connection must be correctly connected at the mains connection.

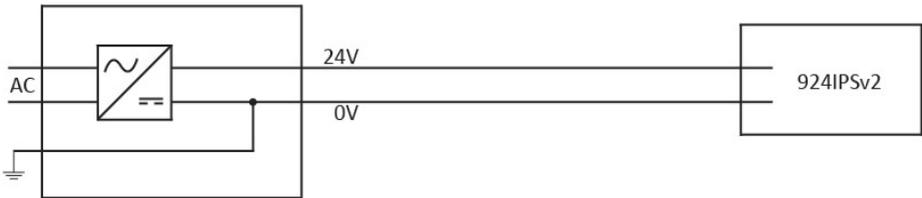


Grounded 24V supply
e.g. Meech A900IPS-SM2MS

Connection to the 924IPSV2 is via an industrial M8 4 Pin connector. With the following pin-outs:

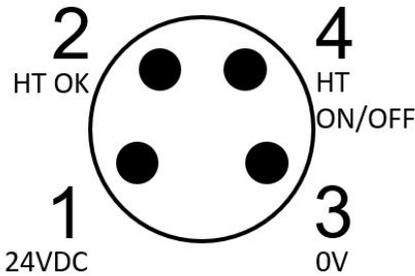

Male connector on Bar

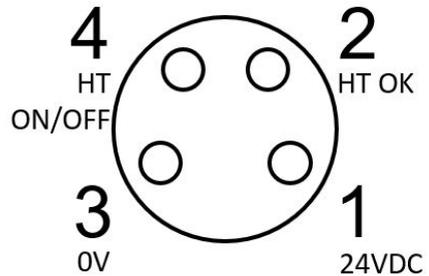

Female connector on Cable

Pin	Colour	Function Specification
1	Brown	24V (21-27V)
2	White	Clean Pin and fault alert Output 0V/24V
3	Blue	0V/ Ground
4	Black	Fault alert Output 0V/24V

Connection using Meech 24V DC power supply

Meech 24V DC supplies are grounded internally. It is important that the mains connection offers a ground connection. Two-pin outlets without a ground connection must not be used.

The switchmode power supply has a standard IEC C13 mains socket and a 2000mm HT cable to M8 Connector. A break-out wire from the switchmode power supply provides the Clean Pin Alert output signal and fault alert.

Connection using customer's own power supply:

It is the customer's responsibility to check that the 24V power supply they will be using is grounded.

The 24V supply should be protected with a 1 Amp fuse.

7.1: Dual Alarm Alert - Remote Monitoring

Remote monitoring of the need to clean the bar is provided by the output signal on pin 2 (white) and fault alert is provided on pin 4 (black). The signal is 0V-24V suitable for direct connection to a PLC input. The output impedance of the signal is 2.2kΩ. The output can also be configured to power an external relay to provide volt-free contacts for other monitoring systems.

Using a BarMaster remote programmer or SmartControl Touch the output can be set to Alarm True = Lo which is factory default or Alarm True = Hi.

NOTE: Make sure that BarMaster is not connected when using the dual alarm remote monitoring feature.

Alarm Pins


Pin-2(White)	This pin is used to report when the ionising performance of the equipment is low and that it requires cleaning. This is considered as a warning signal. The LED pattern on the unit is flashing red .
Pin-4(Black)	This pin is used to report when the HV output of the equipment is critically low. This is considered as a serious fault. The LED pattern on the unit is solid red .

7.1.1: Alarm Logic Level

This is given by the configuration of the “Alarm True” setting using the BarMaster or SmartControl Touch.


Alarm True = hi

This means the logic on both the alarm pins is active high.

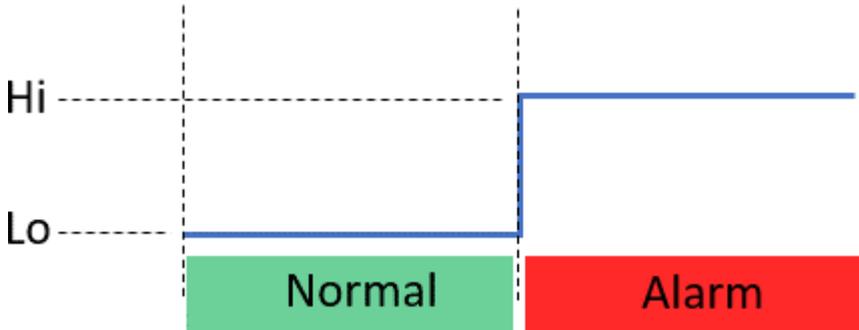

Alarm True = lo

This means the logic on both the alarm pins is active low.

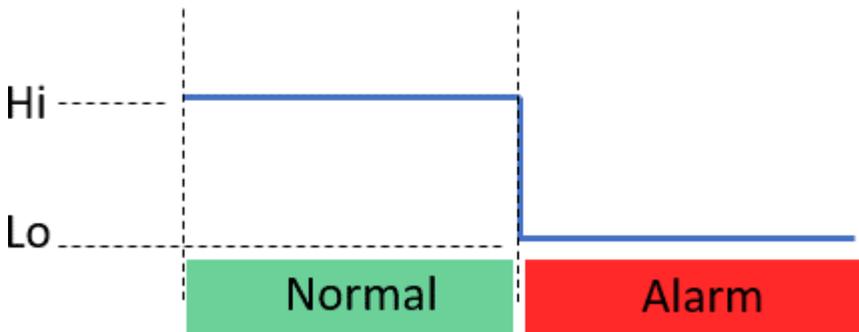


7.1.2: Dual Alarm Output Drive Option

There are 3 different output drive options which are designed to fulfill the vast majority of user requirements and to allow easy integration to PLC equipment.

Option 1 - NPN

Transistor-driven switch which presents a pull-up resistor to 24VDC on the alarm pin. This configuration is the same for both alarm pins (pin-2 and pin-4).

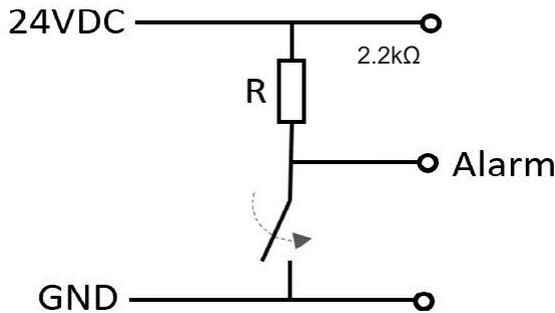

Simplified Diagram of NPN output

Logic Table

Alarm True = Hi

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Lo	Hi	Hi
Black	Hi	Lo	Lo	Hi


Alarm True = Lo

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Hi	Lo	Lo
Black	Hi	Hi	Hi	Lo

Note: On unit power-up, both alarm pins remain in Hi state for up to 60 seconds before these are used as alarm pins.

Option 2 - PNP

Transistor-driven switch which presents a pull-down resistor to GND on the alarm pin. This configuration is the same for both alarm pins (pin-2 and pin-4).

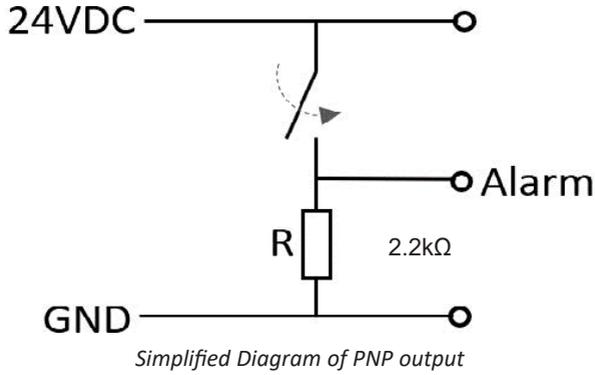

Logic Table

Alarm True = Hi

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Lo	Hi	Hi
Black	Hi	Lo	Lo	Hi


Alarm True = Lo

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Hi	Lo	Lo
Black	Hi	Hi	Hi	Lo

Note: On unit power-up, both alarm pins remain in Hi state for up to 60 seconds before these are used as alarm pins.

Option 3 - N+P

This option presents the combination of both of the previous cases, NPN and PNP, however, the alarm lines are hard-driven to either 24VDC or GND. This configuration is the same for both alarm pins (pin-2 and pin-4).

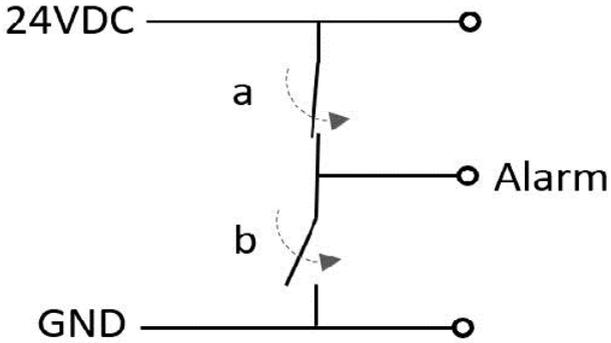

Simplified Diagram of N+P output

Logic Table

Alarm True = Hi

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Lo	Hi	Hi
Black	Hi	Lo	Lo	Hi

Alarm True = Lo

	Start State	Solid Green	Flashing Red	Solid Red
White	Hi	Hi	Lo	Lo
Black	Hi	Hi	Hi	Lo

Note: On unit power-up, both alarm pins remain in Hi state for up to 60 seconds before these are used as alarm pins.

Section 8.0: Operation

Having connected the M8 connector to the bar, power up the 24V supply and check for a green constant LED on the bar. This indicates that the bar is running correctly with a good ion output.


Caution

Always turn off the 24V supply before connecting or disconnecting the M8 connector. Failure to do so could result in stored charges giving a small electric shock.

8.1: Setting the Frequency Rate

The 924IPsv2 features a variable output frequency. The frequency that should be set depends on the ionising product and the distance to the target object.

Optimum Frequency Vs Operating Distance for 924IPsv2

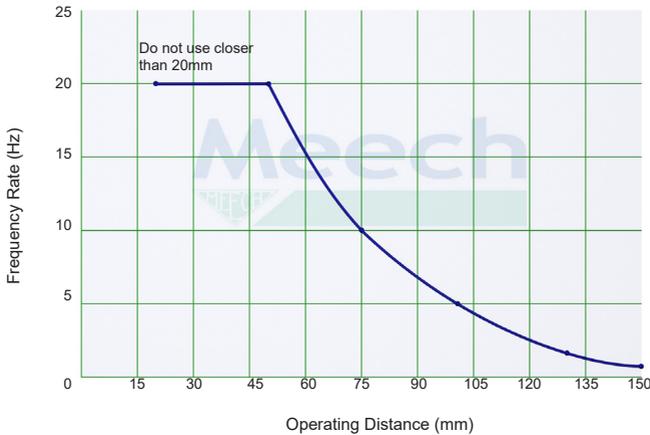

Requires optional BarMaster Remote Programmer or SmartControl Touch.

Section 9.0: Technical and Construction Data

Dimensions (W x H)	22.1mm x 31.2mm
Maximum Length	3960mm
Operating Range	20mm – 150mm
Weight	0.5kg/metre
Construction	FR ABS
Mounting	‘T’ Slot with M4 x 20 studs
Emitters	Sharp titanium pins
Input Current	Max 500mA
Electrical Connection	4 Pole M8
Input Voltage	24V DC (21-27VDC)
Output Voltage	Pulsed DC Adjustable up to +/- 7.5kV with BarMaster and SmartControl Touch
Output Frequency	Default Setting: 20Hz Adjustable with BarMaster and SmartControl Touch from 1Hz to 20Hz
Output Balance	Default Setting: 54%:46% Pos:Neg Adjustable with BarMaster and SmartControl Touch from 80:20 to 20:80 Pos:Neg
Dual Alarm Output Signals	Clean Pin Alert and Fault Alert 24V. Output resistance 2.2kΩ
Environmental Protection	IP66
Max Ambient Temperature	60 °C

Section 10.0: Maintenance

10.1: Cleaning

Ionising bars become contaminated with usage. Dirt build-up on the body of the ioniser and, particularly on the pins, will cause a drop in performance. To get the best from your bar, it should be cleaned as part of regular machine maintenance.

If regular cleaning is not carried out, the bar will detect the drop in performance and trigger the Clean Pin alert. The LED will flash red and the output signal will be activated.

Before cleaning, ensure that the equipment is switched off.

Emitter pins can be cleaned very effectively with a brush. A dry toothbrush is ideal. Make sure the central divider is also cleaned and the pin surface of the bar.



Ionising bars will need periodic wiping to clean grey deposits from the surface of the bar. A cloth moistened with a small amount of IPA or methylated spirits is recommended.

Let dry for a minute and turn back on.



Section 11.0: Fault Finding

To reduce the time it takes to resolve a problem with a Hyperion product, the following process must be completed before requesting assistance from Meech.

The information below shows what is required for a 924IPsv2 bar however, the same process can be used for any of the Hyperion range of products.


If regular cleaning is not carried out, the bar will detect a drop in performance and this will trigger the Clean Pin alert. The LED will flash read and the output signal will be activated.

If the LED flashes red and the bar drops in performance, follow the cleaning procedure in the **Maintenance** section on page 21.

If cleaning does not rectify the problem:

Supplying the following information when you first contact Meech will ensure your claim is processed quickly:

1. Connect to a BarMaster and turn on the equipment
2. A readout will appear on screen and we will require the following information:
 - a. Product Code
 - b. Software information
 - c. Frequency
 - d. Balance
 - e. Output voltage
 - f. Alarm %
 - g. Ion Level %
 - h. Reset Ion Ref
 - i. Alarm True (Hi or Lo)
 - j. Output drive
3. Status of the LED (i.e. solid green, flashing red, solid red, flashing green)
4. Please provide a photo of the equipment as it is installed
5. A description and a photo or video of the problem you are experiencing
6. The action you want Meech to take e.g. repair, replace, warranty etc.

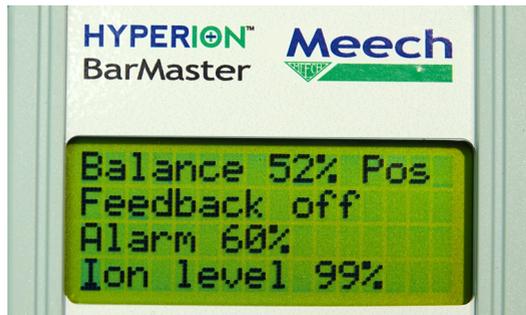

Section 12.0: LED Status

When the equipment powers on, the LED will show green whilst the system monitors the bars performance. If it then starts to flash red or go solid red, check the ion level with the BarMaster.

Flashing Green LED		BarMaster remote programmer or SmartControl Touch is connected.
Solid Green LED		The bar is operating correctly with good ionisation performance.
Flashing Red LED		Bar needs cleaning.
	Action	Switch off power supply and clean as described in maintenance section. Turn the power on and check for green solid LED.
Solid Red LED		Significant performance drop. Bar heavily contaminated. Abnormal output current detected.
	Action	Switch off power supply and clean as described in maintenance section. Turn the power on and check for green solid LED.

If the Output voltage was reduced for example from 7500V to 4000V and the Ion level was not reset. This will affect the calibration and the bar will alarm repeatedly after a short period. Adjust the output voltage to 7500V and ensure the ion level reads 99% and the LED is green.

- a. If Ion level is 0% bar is faulty.
- b. If 10-34% with a 35% alarm setting, return to the clean bar section.

If after cleaning a 80-99% Ion level is reached, you should then reduce the output voltage to the required level. Only then can you reset the Ion Ref.

If the Ion level is well below the alarm level % the Ion output, it will shut down and a solid red LED will show. Should the solid red LED persist, connect your BarMaster and follow the Troubleshooting section or contact your local Meech distributor.

Warning

Do not reset the Ion Reference without cleaning the ionising bar first. Resetting the Ion Reference with a low or 0% reading will provide a green LED, but will only mask any problem with the system.

The 924IPsv2 requires a grounded 24V DC supply. The 0V line must be connected to ground. Failure to do so, will result in damage to the bar or the 24V supply and will void the warranty.

Section 13.0: Troubleshooting

Solid Green LED	Meaning	In normal operation the LED on the bar will illuminate Green. This indicates that the bar is operating correctly with good ionisation performance.
No LED	Meaning	No power to bar
	Action	Check 24V Power Supply over pins 1 and 3. (Brown and Blue wires)
Flashing Green LED	Meaning	BarMaster remote programmer or SmartControl Touch is connected.
	Action	For BarMaster, after programming, reconnect directly to the power supply to resume normal operation.
Flashing Red LED	Likely cause	Contamination causing a drop in performance.
	Action	Switch off power supply and clean as described in Maintenance section. Turn the power on and check for green solid LED
Solid Red LED	Likely Cause	Abnormal output current detected
	Action	Check installation for metallic objects on the emitter pins. Should the solid red LED persist, contact your Meech distributor

Section 14.0 : CE Approval

A CE Declaration of Conformity for this product exists in respect of the Electromagnetic Compatibility Directive 2014/30/EU.



Section 15.0: Health and Safety

Emission of Ozone: Considerably below international standard of 0.1ppm.

Section 16.0: Repairs And Warranty

The Meech 924IPsv2 Bar is warranted by Meech Static Eliminators Ltd. to the original purchaser against defects in material and workmanship for two years after shipment.

The 924IPsv2 requires a grounded 24V DC supply. The 0V line **must** be connected to ground. Failure to do so, will result in damage to the bar or the 24V supply and will void the warranty.

Should any malfunction occur, please return the bar directly to Meech Static Eliminators Ltd. or your local Meech Distributor. All products returned to the factory **MUST** be accompanied by a return authorisation number and must be shipped prepaid. For prompt service, ship the unit to the factory with the return authorisation number shown clearly on the label. Be sure that it is well packed in a sturdy carton with shock absorbing material. Include a note stating the nature of the problem as specifically as possible, and also include instructions for returning the bar to you. We will pay one-way return shipping costs on any repairs covered under the warranty.

Section 17.0: Technical Drawing

Meech
 Meech International Ltd
 10000 17th Avenue SW
 Surrey, BC V4N 1V7
 Tel: 604 273 8822
 Fax: 604 273 8823
 Email: sales@meech.com
 Web: www.meech.com

Meech International is a leading style
 manufacturer of LED lighting bars.
 TITLE: A92-4IPS Lighting Bar

DRAWING NO: A92-4IPS...02

MATERIAL: Various

FINISH: Various

FOR MOUNTING TO A SURFACE OR FRAME OR TO
 Mounting Murr-Matic 80 Series
 Mounting Murr-Matic 80 Series
 Available in Copper

DIMENSIONS IN MM AND NOT SCALE
 UNLESS OTHERWISE INDICATED

DESCRIPTION	SHEET	SCALE
DATE:	03/25/2020	1:1
REVISION:		
DRAWN BY:	Shirley Davies	
CHECKED BY:	Robert Parker	
EXCISED OFF BY:	Shirley Davies	

Standard Length

LED Indicator

M8 Murr Power Connection

M4 Adjustable Mounting T-Slides

Standard Size	Inc. of T-Slides
0240	2
0280	2
0320	2
0360	2
0400	2
0440	2
0480	2
0520	2
0560	2
0600	2
0650	2
0700	2
0740	2
0780	2
0820	2
1000	3
1080	3
1160	3
1240	3
1320	3
1400	3
1480	3
1560	4
1720	4
1880	4
2040	5
2200	5
2360	5
2520	6
2680	6
2840	6
3000	6
3160	7
3320	7
3480	7
3640	8
3800	8

31.2

22.1

Standard Size to drawing number to get the product code. e.g. 240mm bar would be A92-4IPS-0240-02

COPYRIGHT © MEECH STATIC ELIMINATORS LTD 2020
 THIS DOCUMENT AND THE INFORMATION THEREIN IS THE PROPERTY OF MEECH INTERNATIONAL AND SHOULD NOT BE COPIED IN WHOLE OR IN PART FOR MANUFACTURE OR OTHERWISE DISCLOSED WITHOUT THE PRIOR WRITTEN CONSENT OF MEECH INTERNATIONAL.

**Meech International**

2 Network Point
Range Road, Witney
OX29 0YN, UK

Tel: +44 (0)1993 706700
Fax: +44 (0)1993 776977
email: sales@meech.com

**Meech Static Eliminators
(Shanghai) Co. Ltd**

7G, 7F, LP Tower
#25 Xiangfeng Road
201103 Shanghai
China

Tel: +86 400 820 0102
Fax: +86 21 6405 7736
email: china@meech.com

Meech Static Eliminators USA Inc

1298 Centerview Circle
Akron, OH 44321
USA

Tel: +1 330 564 2000 / 1 800 232 4210
Fax: +1 330 564 2005
email: info@meech.com

Meech Shavotech

29/2, Kharadi
Off Pune-Nagar Road
On Old Kharadi Mundhwa Road
Pune : 411014 , Maharashtra
India

Tel: +91 (0)703 093 8211 / +91 (0)741 000 4817
Fax: +91 (080) 28395963
email: india@meech.com

Meech Elektrostatik SA

Kaiserbaracke 166
B-4780 St.Vith
Belgium

Tel.: +32 (0)80 670 204
Fax: +32 (0)80 862 821
email: mesa@meech.com

**Meech International
(Singapore) Pte. Ltd.**

7 Temasek Boulevard
12 - 07 Suntec Tower One
Singapore
Singapore
038987

Tel: +65 65918859
email: singapore@meech.com

Meech CE

Gábor László utca 2
Budapest 1041
Hungary

Tel: +36 1 7977039
+36 30 2803334
email: ce@meech.com